



The Yealink SIP-T44W is a feature-rich IP phone designed for efficient communication in professional settings. Here's a guide to help you get started:

For detailed instructions & advanced configurations, refer to the [Yealink SIP-T44W Quick Start Guide](#) & the [User Manual](#)

1. Setting Up the Phone

- **Assemble the Phone:** Attach the stand to the back of the phone. Connect the handset to the handset port using the provided cord. If using a headset, connect it to the headset port.
- **Power and Network Connection:**
 - **Power:** Connect the power adapter to the DC5V port if not using Power over Ethernet (PoE).
 - **Network:** Connect the LAN port to your network using an Ethernet cable. If connecting a PC, use the PC port on the phone.

2. Configuring the Phone

- **Obtain IP Address:** Press the "OK" button on the phone to display its IP address.
- **Access Web Interface:**
 - Enter the IP address into a web browser on a computer connected to the same network.
 - Log in using the default credentials (typically "admin" for both username and password).
- **Account Setup:** Navigate to the "Account" tab to configure SIP account details provided by your service provider.

3. Basic Call Features

- **Placing a Call:**
 - **Handset:** Pick up the handset, dial the number, and press "Send."
 - **Speakerphone:** Press the speakerphone button, dial the number, and press "Send."
 - **Headset:** Press the headset button, dial the number, and press "Send."
- **Answering a Call:**
 - **Handset:** Lift the handset.
 - **Speakerphone:** Press the speakerphone button.
 - **Headset:** Press the headset button.
- **Ending a Call:**
 - **Handset:** Place the handset back on the cradle.
 - **Speakerphone/Headset:** Press the corresponding button or the "End Call" soft key.

4. Advanced Features

- **Call Hold:** Press the "Hold" button during a call. To resume, press "Resume."
- **Call Transfer:**
 - **Blind Transfer:** Press "Transfer," dial the number, and press "Transfer" again.
 - **Attended Transfer:** Press "Transfer," dial the number, wait for the recipient to answer, then press "Transfer."
- **Voicemail:** Press the "Message" button to access voicemail. Follow the prompts to listen to messages.

5. Customizing Settings

- **Ringtones:** Navigate to *"Menu" > "Settings" > "Basic Settings" > "Sound" > "Ring Tones"* to select a ringtone.
- **Display:** Adjust brightness and contrast via *"Menu" > "Settings" > "Basic Settings" > "Display."*
- **Network Settings:** Configure Wi-Fi and Bluetooth under *"Menu" > "Settings" > "Basic Settings" > "Wi-Fi"* or *"Bluetooth."*